


LUGGAGE ROOM LIGHT

COMPONENTS

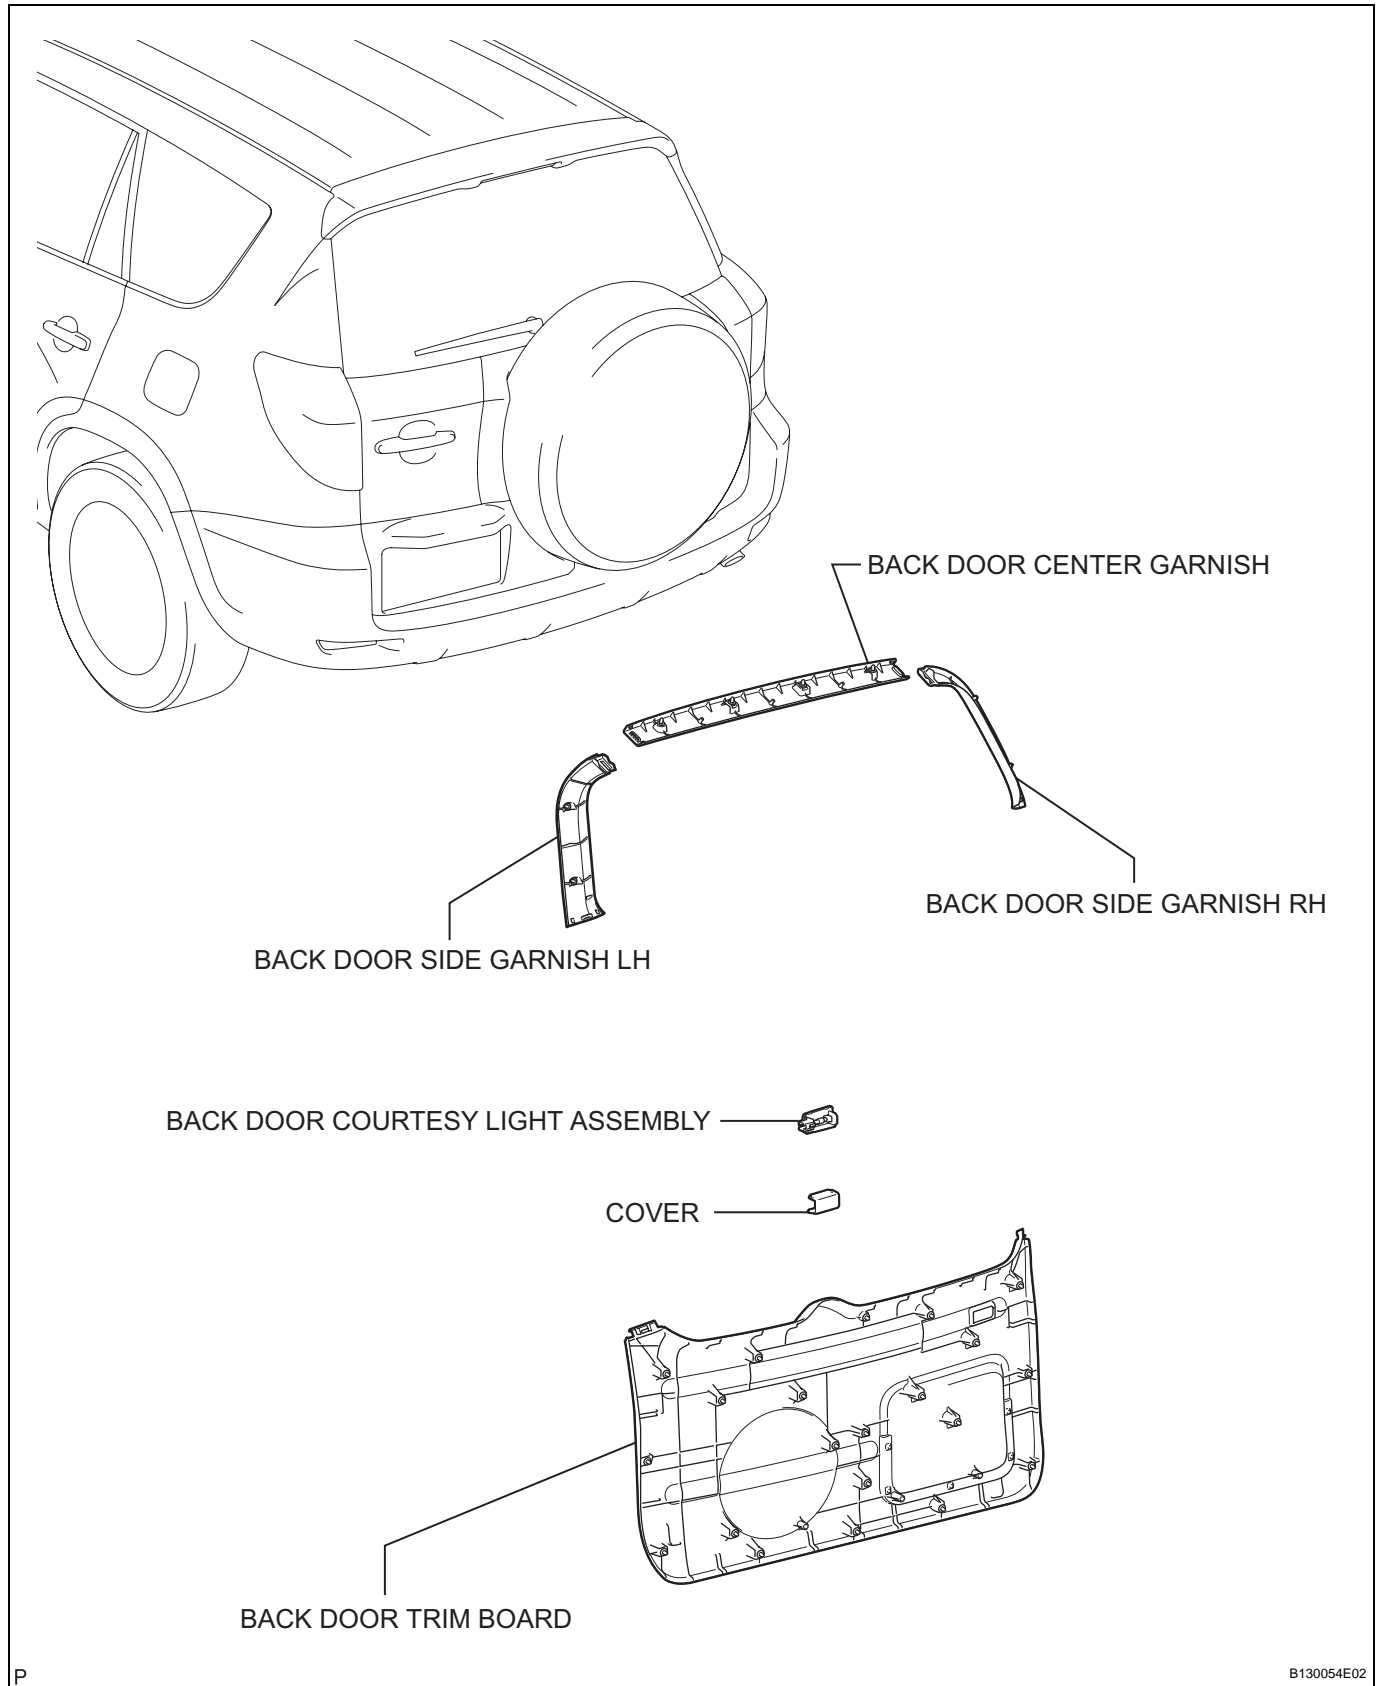

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:



Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE BACK DOOR CENTER GARNISH (See page [ED-59](#))
3. REMOVE BACK DOOR SIDE GARNISH LH (See page [ED-59](#))
4. REMOVE BACK DOOR SIDE GARNISH RH (See page [ED-59](#))
5. REMOVE BACK DOOR TRIM BOARD (See page [ED-59](#))
6. REMOVE BACK DOOR COURTESY LIGHT ASSEMBLY


- (a) Using a screwdriver, pry out the light as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

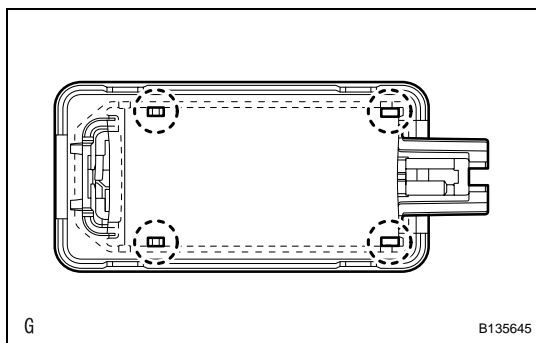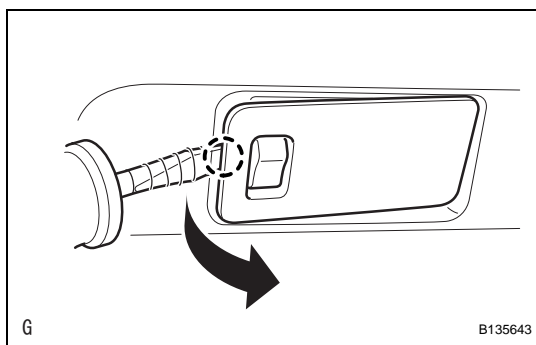

- (b) Detach the 4 claws and remove the light shade.

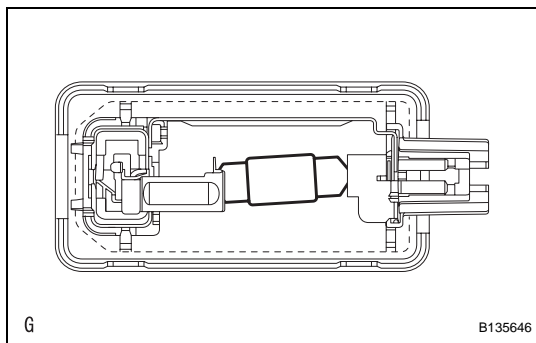


- (c) Remove the light bulb from the light.


INSTALLATION

1. INSTALL BACK DOOR COURTESY LIGHT ASSEMBLY


(a) Install the bulb to the light.

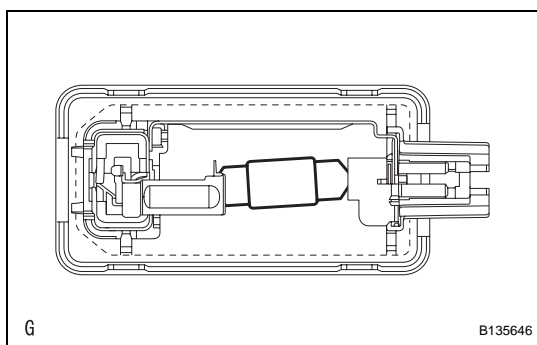

(b) Attach the 4 claws to install the light shade.

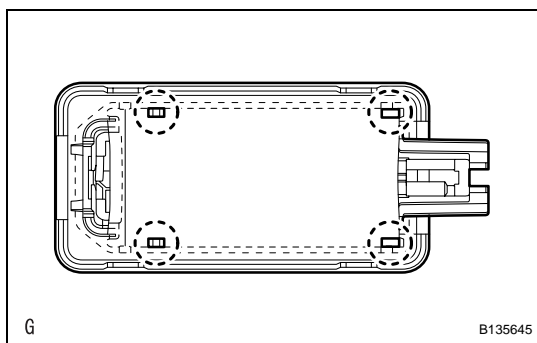

(c) Install the light as shown in the illustration.

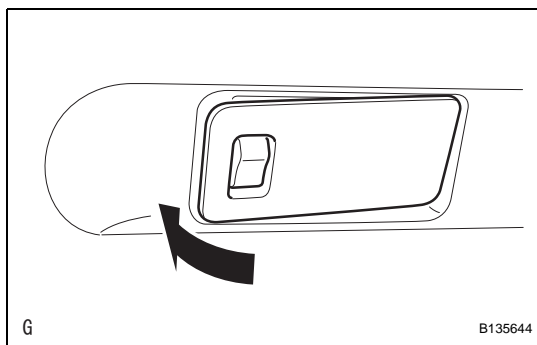

2. **INSTALL BACK DOOR TRIM BOARD** (See page [ED-66](#))
3. **INSTALL BACK DOOR SIDE GARNISH RH** (See page [ED-67](#))
4. **INSTALL BACK DOOR SIDE GARNISH LH** (See page [ED-67](#))
5. **INSTALL BACK DOOR CENTER GARNISH** (See page [ED-67](#))
6. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**